


EXPLODED VIEW – TWIN EAGLES GAS GRILL



REPLACEMENT PARTS LIST – TWIN EAGLES GAS GRILL

Item No.	TE Part Number	Description	TEBQ 30G	TEBQ 30R	TEBQ 36G	TEBQ 36R	TEBQ 42G	TEBQ 42R	TEBQ 54R
1	S21720-3Y	30" Front Hood Assembly	1	1					
2	S21720-36Y	36" Front Hood Assembly			1	1			
3	S21720-4Y	42" Front Hood Assembly					1	1	
4	S21720-54Y	54" Front Hood Assembly							1
5	S14128	Hood Bumper	4	4	4	4	4	4	4
6	S14220	Screw, 1/4-20x1/2, Phil Pan Head S/S	4	4	4	4	4	4	4
7	S13105	Bracket, Handle Chrome	2	2	2	2	2	2	2
8	S12315	Hood Handle (1.25D x 18GA x 24)	1	1					
9	S12339	Hood Handle (1.25D x 18GA x 30)			1	1			
10	S12316	Hood Handle (1.25D x 18GA x 36)					1	1	
11	S12347	Hood Handle (1.25D x 18 GA x 48)							1
12	S15340A	Thermometer	1	1	1	1	1	1	1
13	S14421	Basting Pan		1		1		1	1
14	S16208Y	Rotisserie Motor with Hanger (s/s)		1		1		1	1
15	S21748	Rotisserie Motor Hanger		1		1		1	1
16	S21758	Warming Tray Bracket	2	2	2	2	2	2	2
17	S21737	Infrared Burner Igniter Holder		1		1		1	1
18	S21738	Infrared Burner Igniter Holder, Right Hand							1
19	S12640	Elbow, 3/8 NPT x 3/8 MPT		1		1		1	1
20	S15108-50	Orifice, #50 I.R. NG		1		1			2
21	S15108-57	Orifice, #57 I.R. LP		1		1			2
22	S15108-48	Orifice, #48 I.R. NG						1	
23	S15108-56	Orifice, #56 I.R. LP						1	
24	S22713-30	Rear Hood Cover, 30	1	1					
25	S22713-36	Rear Hood Cover, 36			1	1			
26	S22713-42	Rear Hood Cover, 42					1	1	
27	S22713-54	Rear Hood Cover, 54							1
28	S16240	Halogen light complete	2	2	2	2	2	2	3
29	S16191	Bulb, halogen light (12V/ 10W)	2	2	2	2	2	2	3
30	S16241	Cover Lens	2	2	2	2	2	2	3
31	S16322	Hot surface igniter, Rotisserie Burner		1		1		1	2
32	S21747-L	Motor Mounting Bracket (Lh)		1		1		1	1
33	S21747-R	Motor Mounting Bracket (Rh) (Optional)		1		1		1	1
34	S13331	Large Infrared Rotisserie Burner						1	
35	S13330	Small Infrared Rotisserie Burner		1		1			2
36	S14195	Acorn Nut	2	2	2	2	2	2	2
37	S14194	Spring Stand Off	4	4	4	4	4	4	4
38	S14216Y	Front Hood Hardware Kit	2	2	2	2	2	2	2
39	S20206	Spit Saddle	2	2	2	2	2	2	2
40	S13865	Meat Holder Forks (pair) (s/s), 9/16" spit rod		1		1		1	2
41	S13833	Warming Rack (30") (s/s)	1	1					
42	S13867	Warming Rack (36") (s/s)			1	1			
43	S13834	Warming Rack (42") (s/s)					1	1	
44	S13878	Warming Rack (54") (s/s)							1
45	S13863	Spit Rod (30") (s/s)		1					
46	S13868	Spit Rod (36") (s/s)				1			
47	S13864	Spit Rod (42") (s/s), 9/16"						1	
48	S13877	Spit Rod (54") (s/s)							1
49	S15121	Burner Valve Microswitch	2	3	3	4	3	4	6
50	S15101Y	Burner Valve	2	3	3	4	3	4	6
51	S12601	Brass Elbow, 3/8 CC x 1/8 FIP		1		1		1	2
52	S15303	Regulator, NG (NG grill ONLY)	1	1	1	1	1	1	1
53	S15302	Regulator, LP (LP grill ONLY)	1	1	1	1	1	1	1
54	S12602	Brass Coupling, 3/8 Flare x 1/2 FIP	1	1	1	1	1	1	1
55	S15110-41	Orifice, #41 NG (Main Burner)	2	2	3	3	3	3	4
56	S15110-53	Orifice, #53 LP (Main Burner)	2	2	3	3	3	3	4
57	S12606	1/8 Pipe Plug	2	1	2	1	2	1	1
58	S21796	Manifold Spacer	*	*	*	*	*	*	*
59	S12734	Manifold, 30	1	1					
60	S12736	Manifold, 36			1	1			
61	S12735	Manifold, 42					1	1	
62	S12745	Manifold, 54							1
63	S12665	1/4 Hex Socket Plug	1	1	1	1	1	1	1

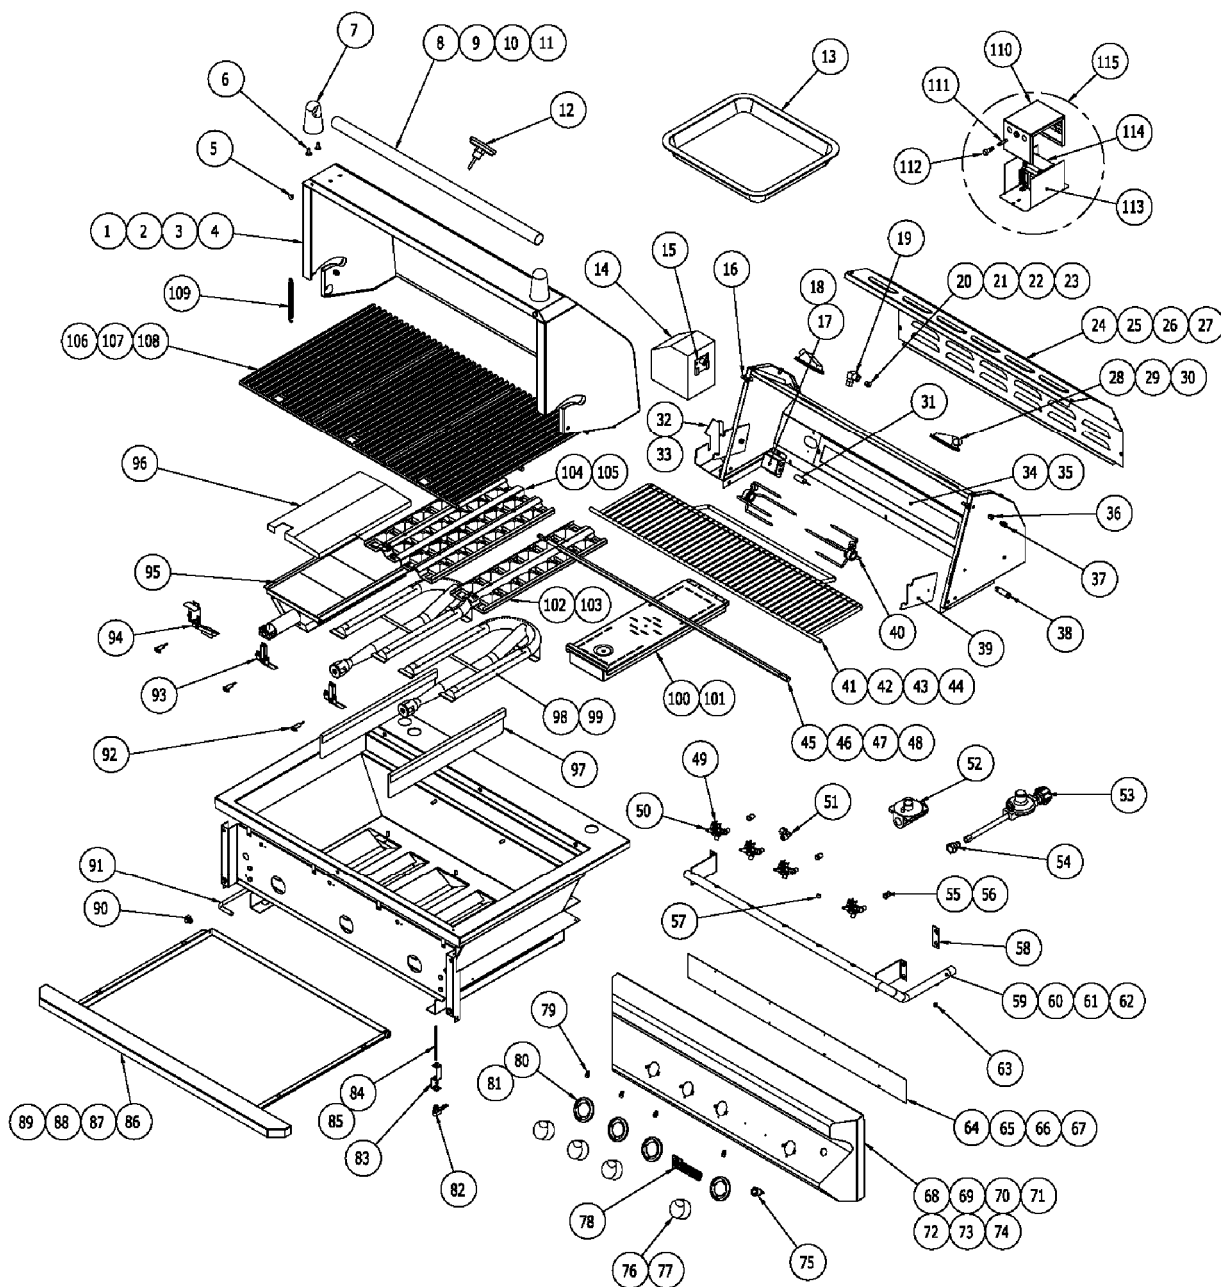

REPLACEMENT PARTS LIST – TWIN EAGLES GAS GRILL (CONTINUED)

Item No.	TE Part Number	Description	TEBQ 30G	TEBQ 30R	TEBQ 36G	TEBQ 36R	TEBQ 42G	TEBQ 42R	TEBQ 54R
64	S21767-3	Heat Deflector, 30	1	1					
65	S21767-36	Heat Deflector, 36			1	1			
66	S21767-4	Heat Deflector, 42					1	1	
67	S21767-54	Heat Deflector, 54							1
68	S21715-3Y	Front Panel, 30R		1					
69	S21715-36Y	Front Panel, 36R				1			
70	S21715-4Y	Front Panel, 42R						1	
71	S21715-54Y	Front Panel, 54R							1
72	S21717-3y	Front Panel, 30G	1						
73	S21717-36Y	Front Panel, 36G			1				
74	S21717-4Y	Front Panel, 42G					1		
75	S16196	Illuminated Switch	1	1	1	1	1	1	1
76	S13154	Knob, Chrome	2	3	3	4	3	4	6
77	S13122	Knob Insert	2	3	3	4	3	4	6
78	S13147	Twin Eagles Logo	1	1	1	1	1	1	1
79	S16192	LED Holder	2	3	3	4	3	4	6
80	S13128P	Bezel, Knob, Stainless Steel	2	3	3	4	3	4	6
81	S14121	Bezel Screw	4	6	6	8	6	8	12
82	S16194	Hood Switch	1	1	1	1	1	1	1
83	S21757	Hood Switch Bracket	1	1	1	1	1	1	1
84	S12112	Hood Switch Rod	1	1	1	1	1	1	1
85	S14232	Retaining Clip	1	1	1	1	1	1	1
86	S21745-3Y	Drip Pan Assy. (30")	1	1					
87	S21745-36Y	Drip Pan Assy. (36")			1	1			
88	S21745-4Y	Drip Pan Assy. (42")					1	1	
89	S21745-54Y	Drip Pan Assy. (54")							1
90	S14420	Roller Bearing	4	4	4	4	4	4	4
91	S12401	Flex Tubing, 3/8 x 48"		1		1		1	2
92	S16321	Hot surface igniter, Main Burner	2	2	3	3	3	3	4
93	S21750Y	Flash Tube, (For standard U-Burners ONLY)	2	2	3	3	3	3	3
94	S21765Y	Flash Tube, (For optional Sear Zone Burners ONLY)	1	1	1	1	1	1	1
95	S13345	Sear Zone Burner (For optional Sear Zone Burners ONLY)	1	1	1	1	1	1	1
96	S13144	Screen Mesh (For optional Sear Zone Burners ONLY)	1	1	1	1	1	1	1
97	S 21743	Zone Divider	1	1	2	2	2	2	3
98	S 13301	Stainless Steel U6-burner (0.75 in. wall)	2	2			3	3	3
99	S 13350	Stainless Steel U5-burner (0.75 in. wall)			3	3			
100	S91183Y	Smoker Box Assy.	1	1			1	1	1
101	S22728Y	Smoker Box, Assy. (36")			1	1			
102	S21761 Y	4 1/2" Briquette Tray Assembly complete with briquettes (Grill w/ Sear Zone) Optional			2	2			
103	S21752Y	6" Briquette Tray Assembly complete with briquettes	2	2			2	2	2
104	S21753Y	12" Briquette Tray Assembly complete with briquettes (Standard grill)	1	1			2	2	2
105	S21759 Y	10" Briquette Tray Assembly complete with briquettes (Standard grill)			2	2			
106	S13801	13" Stainless Steel Hex Grate	2	2			2	2	2
107	S13802	12" Stainless Steel Hex Grate					1	1	2
108	S13873	10 9/16" Stainless Steel Hex Grate			3	3			
109	S14226	Springs kit, hood	2	2	2	2	2	2	2
110	S220739	Transformer Cover	1	1	1	1	1	1	1
111	S16264	Fuse, 15A 250V	1	1	1	1	1	1	1
112	S16263	Fuse Holder	1	1	1	1	1	1	1
113	S22038	Transformer Mount	1	1	1	1	1	1	1
114	S16233	Transformer	1	1	1	1	1	1	1
115	S16233Y	Transformer Assembly	1	1	1	1	1	1	1
Non-Shown Parts									
	S13129	Briquettes Only	(48)	(48)	(72)	(72)	(72)	(72)	(72)
	S16247Y	LED Wire Harness, 30" (NOT SHOWN)	1	1					
	S16248Y	LED Wire Harness, 36" (NOT SHOWN)			1	1			
	S16248Y	LED Wire Harness, 42" (NOT SHOWN)					1	1	
	S16296Y	LED Wire Harness, 54" (NOT SHOWN)							1